Secure Temp® ASHT

1" Insulated Stainless Steel, High-Temperature Chimney





www.securitychimneys.com 800-361-4909 (US) 800-667-3387 (Canada)

At Security Chimneys, we have been manufacturing chimney since 1960

That makes us one of the oldest manufacturers of venting products in North America.

The knowledge & experience gained over the years is reflected in the quality of the venting products we offer today. Secure Temp ASHT is a perfect example. This high-quality all-fuel chimney was introduced in 1978 and was quickly adopted by professional installers for use with factory-built fireplaces.

Since then, a number of enhancements have been made for use with freestanding stoves. Hearth professionals favour ASHT for its slim profile and smaller frame size; ideal for tight spaces. The lighter weight also makes it easy on the back; an important feature for installers who climb ladders every day.

Even better – unlike some competitors, when enclosed ASHT requires no continuous

shields to meet Canada's ULC-S629 Standard.





Secure Temp ASHT Features & Benefits

FEATURES	BENEFITS
Proven engineered design with inner flue and outer casing both made of sturdy, high-quality, corrosion-resistant stainless steel	 Long, dependable service life means this will be the last chimney your home will ever need
Free-Floating stainless inner flue	 Flue is fixed only to male coupler on one end leaving it free to accommodate thermal expansion & contraction Minimizes risk of metal fatigue and associated buckling / tearing that can occur with use; especially during chimney fires
Laser-Welded Inner and Outer Seams	 Enhances vertical strength Eliminates potential source of leakage Improves product quality & consistency
Twist-Lock Assembly with End Couplers	 Enables quick connection of pipe lengths in seconds with just a 1/8th turn Eliminates need for awkward locking bands Multi-point contact between couplers combined with generous overlap adds cross-sectional strength and reliable joint connection
One-inch wall thickness filled with exclusive Secura Plus insulation that will not shift or settle	 Insulation helps to keep the heat in and the cold out Maintains higher flue-gas temperatures for fast start-ups and stable draft performance Reduces condensation and related creosote deposits – the fuel that feeds a chimney fire Eliminates risk of hot-spots
Slim, compact profile and lower weight yet still permits installation with as little as 2" clearance-to-combustibles	 Fits within a smaller frame and enclosure making it ideal for use in both renovation and new construction ASHT is easy on the back - 6" diameter weighs in a just 5.2 lbs. per linear foot
No need for continuous shields when enclosed	Eliminates cost of extra parts & labour Simplifies installations
Heavy-Duty Ceiling Supports with Integrated Coupler & Flue Extension	 Factory-assembled as a single part to minimize air leakage around chimney Reduces number of parts needed and simplifies installation
Wide variety of insulated components and vapor- barrier friendly designs to match today's high- efficient homes	 Keeps heating dollars in the home instead of being lost through walls & ceilings Taller shields to suit deeper attic insulation levels Ability to seal around chimney minimizes potential air leakage Reduces risk of severe condensation in cold climates Helps to prevent water damage within exterior walls and within ceiling / roof assemblies
Universal Support Hardware	Roof Brace, Roof Support, Wall Support, and Wall Band all feature universal collar that can be sized to fit any diameter of ASHT pipe
Industry's BEST Limited Lifetime Warranty	 Unlike most others, our warranty is TRANSFERABLE to a future owner (competitor warranties are good only to the original purchaser) Adds value for both the homeowner and prospective homeowner

Specifications

Applications

ASHT is a double-wall, all-fuel chimney system for use with wood stoves, wood fireplaces and other appliances using wood, oil, gas, or coal.

Materials and Construction

.016" 441 stainless steel inner wall. .016" 430 stainless steel outer wall. 1" high-temperature mineral fiber insulation. Laser welded seam.

Clearances

2" clearance to combustibles

Diameters

5", 6", 7", 8", 10"

Listings

ULC S629 - 6", 7", 8" ULC S604, and UL 103HT



Intertek

ULC S629, ULC S604, and UL 103HT System


ASHT

ASHT is a double-wall, all-fuel chimney system for use with wood stoves, wood fireplaces and other appliances using wood, oil, gas, or coal. The use of stainless steel, selected for its resistance to high temperatures and corrosion, lends outstanding durability to the ASHT high-temperature chimney.

ASHT features 1" of high-temperature mineral fiber insulation. This insulation minimizes heat loss through the chimney walls and can withstand intense heat. The free-floating inner lining is attached only to the male coupler at the top, expanding and contracting freely with temperature fluctuations. The external casing carries the structural load. All ASHT pipe lengths, elbows, and other fittings feature fast and easy twist-lock assembly with just oneeighth turn. Even better, ASHT uses universal support hardware to speed up installation and to dramatically reduce the number of SKUs you need to keep in inventory.




Typical Installations

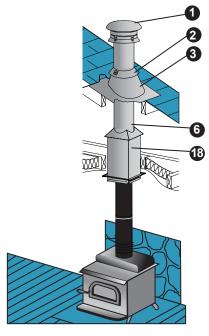


Single-Story Woodstove

Insta	Installation Key					
	Vertical Cap	11	Floor Support			
2	Storm Collar	12	Flue Extension			
	Adjustable Roof Flashing	13	Tee			
4	Attic Radiation Shield	14	Wall Thimble			
5	Firestop	15	Tee Cap			
	Length	16	Tee Support			
	Finishing Support	17	Anchor Plate (optional)			
8	Wall Support	18	Reduced Clearance Support			
9	Wall Radiation Shield					
10	Elbow					


- Refer to our Typical Venting Installation drawings to select the appropriate component parts for your installation.
- Always refer to installation instructions for complete information.

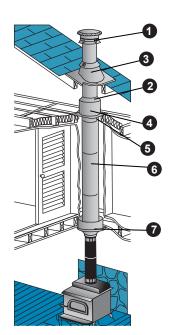

Multi-story Woodstove

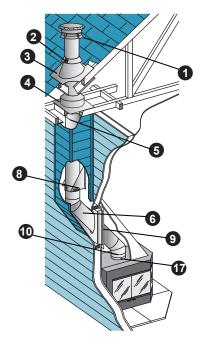

Fireplace through exterior insulated chase

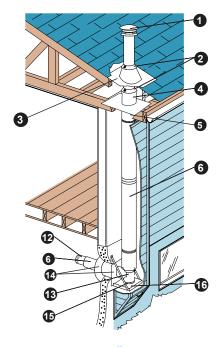

Exterior installation to a wood stove

For guidance in selecting stovepipe components, see our catalogs for Security's DL Double-Wall stovepipe.

Loadbearing Capacity

Please reference the chart below for each diameter's and supports load bearing capacity. Maximum height in feet.

Ø Interior	5″	6"	7″	8″	10"
Floor Support Plate	32	32	32	32	32
Reduced Clearance Support		60	50	45	
Adjustable Tee Support	63	63	55	48	39
Roof Support	42	34	27	24	20
Wall Support	30	28	24	20	
Square Cathedral Support	-	60	50	45	35
Finishing Support	-	75	65	59	-

Size of Openings

The size of the opening may vary depending on the pitch of the roof.

Always maintain the minimum 2" clearances to the chimney. The only exception to this rule is with Reduced Clearance Supports (RCS). Consult our instructions.

Ø Interior	5″	6"	7″	8″	10"
Floor Support Plate	11 %"	123/8"	13 3/8"	143/8"	163/8"
Finishing Support	11 %"	123/8"	143/8"	143/8"	
Roof Support	11 %"	123/8"	13 3/8"	143/8"	163/8"
Wall Thimble	11 %"	123/8"	133/8"	143/8"	163/8"
Firestop	11 %"	123/8"	13 3/8"	143/8"	163/8"
Cathedral Support		123/8"	143/8"	143/8"	
Reduced Clearance Support		10 %"	11 %"	12 %"	

General Specifications

Ø int.	Ø ext.	Insulation thickness	Weight	Twist-Lock assembly	Clearance
5"	7"	1"	4.1 lb./ft.	YES	2"
6"	8"	1"	5.2 lb./ft.	YES	2"
7"	9"	1"	6.4 lb./ft.	YES	2"
8"	10"	1"	7.2 lb./ft.	YES	2"
10"	12"	1"	8.9 lb./ft.	YES	2"

Planning Your Installation

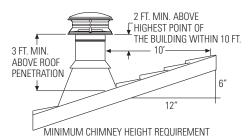


Figure 1

The following recommendations are a general guideline to assist in the layout and selection of the chimney components needed for your installation. Always follow ASHT Installation instructions when installing your chimney system (enclosed with any support). Installation instructions can be viewed online at www.securitychimneys.com.

- The diameter of the chimney should match the outlet size of the appliance. An improperly sized chimney results in poor draft and excessive creosote formation.
- Measure the diameter of the appliance flue outlet. Select the chimney connector stovepipe with the same size diameter as the appliance flue outlet.
- Determine if the installation is a through-the-roof installation or a through-the-wall installation. A through-the-wall installation will require additional components (Wall Thimble, Tee/Cap, Tee Support, Wall Bands, Flue Extension, and Decorative Collar).
- Install the chimney in the interior of the structure whenever possible. A cold exterior chimney will produce less draft and will generate more creosote.
- If possible avoid offsets that serve to restrict the natural draft. A straight vertical installation is more efficient and less likely to develop creosote. If an offset is required to avoid rafters or other obstructions, measure the horizontal distance required and the vertical height available. 15°, 30° and 45° elbows are available. (Note: 45° elbows are only allowed in Canada. The maximum angle allowed in the U.S. is 30°.) A maximum of two offsets (four elbows) in a single installation are permitted. At least one suitable support if required for each offset.
- Determine the minimum chimney height above the roof line. Building codes require a minimum of 3' above the roof penetration and at least 2' higher than any portion of a building within 10'. See Figure 1. The termination cap is installed above that point. If chimney is more than 5' above the roof penetration a Roof Brace is required.
- Measure the roof pitch. For example, a 6/12 pitch has a vertical rise of 6" over a horizontal distance of 12". Select the appropriate
- Determine the total length of chimney and stovepipe required for the installation. To calculate the installed length of 6"-8" ASHT chimney pipe, subtract 1 1/4" per joint. Subtract 1 7/8" of DL stovepipe. Minimum chimney height, at sea level, of straight vertical chimney, is 10' to 15' above the appliance outlet. Higher elevations, or the use of elbows or a tee, will require approximately 30% to 60% more height to provide for an adequate draft.
- Be fire safe. Maintain at least 2" clearance to combustibles. Follow local building codes and have your chimney inspected by a certified professional.

Wall Support Kit



Through-Wall Option #1: Kit includes: Insulated Wall Thimble, Tee, Twist-Lock Tee Cap, Wall Support, Wall Band, Flue Extension, Decorative Collars for DL stove pipe, and Vertical Cap. With this option, Tee can be positioned above or below Wall Support.

SIZE	6″	
ORDER#	6WSK-2	

Exterior Kit



Through-Wall Option #2: Kit includes: Insulated Wall Thimble, Tee, Twist-Lock Tee Cap, Tee Support with Coupler, Wall Band, Flue Extension, Decorative Collars for DL stove pipe, Vertical Cap, and Spark Arrester.

With this option, Tee is positioned on top of Tee Support.

SIZE	6"
ORDER#	6EK-2

Interior Kit



Kit includes: Round Finishing Support with removable trim collar, Adjustable Attic Radiation Shield, and Vertical Cap.

SIZE	6"
ORDER#	6KINC

Pipe Length




Available in sizes from 5 - to 10-inch diameters, the ASHT line offers double-wall, 1-inch insulated chimneys. Lengths twist-lock together with just an 1/8th rotation.

FOR USA ONLY: Available in Alu-Zinc outer casing for 6", 7", 8" (CODE GL)

9	SIZE	5"	6"	7"
Weight p	er foot (lbs)	4.1	5.2	6.4
LENGTH	EFFECTIVE LENGTH	ORDER#	ORDER#	ORDER#
8"	6 ¾"	5L8-2	6L8-2	7L8-2
12"	10 ¾"	5L12-2	6L12-2	7L12-2
18"	16 ¾"	5L18-2	6L18-2	7L18-2
24"	22 ¾"	5L24-2	6L24-2	7L24-2
36"	34 ¾	5L36-2	6L36-2	7L36-2
48"	46¾"	5L48-2	6L48-2	7L48-2
SIZE		8″	10"	
Weight	per foot (lbs)	7.2	8.9	
LENGTH	EFFECTIV LENGTH	()K)FK #	ORDER#	
8"	6 3/4"	8L8-2	10L8-2	
12"	10 ¾"	8L12-2	10L12-2	
18"	16 ¾"	8L18-2	10L18-2	
24"	22 ¾"	8L24-2	10L24-2	
36"	34 ¾	8L36-2	10L36-2	
48"	46¾"	8L48-2	10L48-2	

Adjustable Pipe Length

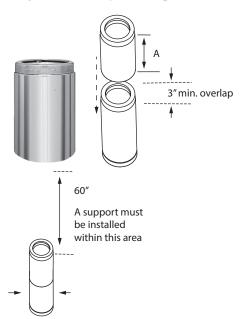

Used in combination with straight insulated lengths, the adjustable length makes it possible to fit a length perfectly, either vertically, horizontally, or at an angle.

IMPORTANT: The adjustable length is not designed as a load bearing component. Its vertical installation requires an appropriate support on the section above it to bear the weight of the remaining installation.

FOR USA ONLY: Available in Alu-Zinc outer casing for 6", 7", 8" (CODE GL)

SIZE	5″	6″	7″
A	11 ¼"	11 ¼"	11 ¼"
LENGTH	ORDER#	ORDER#	ORDER#
12"	5LA-2	6LA-2	7LA-2
SIZE	8″	10"	
А	11 ¼"	11 ¼"	
LENGTH	ORDER#	ORDER#	
12"	8LA-2	10LA-2	_

15° Elbow



Use to offset chimney around obstacles such as a joist or truss. A maximum of two offsets (4 elbows) is permitted. Each elbow is sold individually. FOR USA ONLY: Available in Alu-Zinc outer casing for 6", 7", 8" (CODE GL)

SIZE	5"	6"	7"	8"	10"
А			1/2"		
В			41/2"		
ORDER#	5E15-2	6E15-2	7E15-2	8E15-2	10E15-2

30° Elbow



Use to offset chimney around obstacles such as a joist or truss. A maximum of two offsets (4 elbows) is permitted. Each elbow is sold individually. FOR USA ONLY: Available in Alu-Zinc outer casing for 6", 7", 8" (CODE GL)

SIZE	5"	6"	7"	8"	10"
А			2"		
В			71/2"		
ORDER#	5E30-2	6E30-2	7E30-2	8E30-2	10E30-2

45° Elbow






Use to offset chimney around obstacles such as a joist or truss. A maximum of two offsets (4 elbows) is permitted. Each elbow is sold individually. For use in Canada only.

SIZE	5"	6"	7"	8"	10"
А			3"		
В			6 7/8"		
ORDER#	5E45-2	6E45-2	7E45-2	8E45-2	10E45-2

Tee

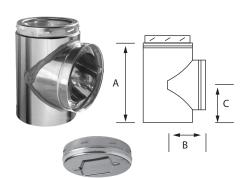

Located at the base of the chimney, it provides the horizontal connection to the appliance.

An insulated Tee Cap (TCI) is included.

FOR USA ONLY: Available in Alu-Zinc outer casing for 6", 7", 8" (CODE GL)

SIZE	5″	6"	7"	8"	10"
А	9 ½"	10 ½"	11 ¾"	13"	15"
В	4 3/4"	5 1/4"	5 1/4"	6 1/4"	7 1/4"
С	5 ½"	6"	6 ½"	7 1⁄4"	8 1/4"
ORDER#	5TI-2	6TI-2	7TI-2	8TI-2	10TI-2

Tee Cap (Twist-Lock)






The twist-lock cap makes inspection access and servicing

SIZE	5"	6"	7"	8"	10"
ORDER#	5TCI	6TCI	7TCI	8TCI	10TCI

Flue Extension





Used to make the transition from insulated chimney to stovepipe in a through-the-wall installation. Refer to installation instructions for more details.

SIZE	5"	6"	7″	8″	10"
А			3"		
В	5"	6"	7"	8"	10"
ORDER#	5CA	6CA	7CA	8CA	10CA


Insulated Reduced Clearance Support box



Use to support chimney with flat, vaulted, or cathedral ceiling. Certified to reduce clearances from 2" to just 1" for any portion of chimney shielded within the support's box. Note: Any exposed chimney above the support still requires minimum 2" clearances-to-combustibles. Reduced clearance allows for smaller opening & frame within ceiling. Support can also serve as the Attic Radiation Shield. Includes top collar as shown, insulation, and two-piece adjustable black finish trim. Integrated adapter accepts either single-wall or double-wall stovepipe.

SIZE	6"	7″	8″		
А	6"	7"	8″		
В	10"	11"	12"		
С	24"				
D		2"			
ORDER#	6RCS	7RCS	8RCS		

Reduced Clearance Support Extension

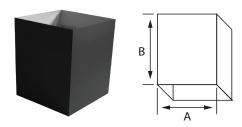


This part is designed to extend the height of the Insulated Reduced Clearance Support (RCS) by 22" when additional height is required.

SIZE	6"	7"	8"
А	10"	11"	12"
В	24"	24"	24"
ORDER#	6SE	7SE	8SE

Square Cathedral Ceiling Support






Support for use with vaulted or cathedral ceilings. 6" version fits within 12" x 12" frame. Larger 7" and 8" versions will fit within frame between 16"-on-center construction. Includes two-piece adjustable black finish trim. Integrated adapter accepts both single-wall or double-wall stovepipe.

Note: Where attic is located immediately above this support, an attic radiation shield is required.

SIZE	6"	7″	8″		
А	6"	7"	8"		
В	12"	14 3/8"	14 3/8"		
С	24"				
D		2"			
ORDER#	6SSC24	7SSC24	8SSC24		

Square Cathedral Ceiling **Support Extension**






Use to extend the height of the Square Cathedral Ceiling Support (SSC24) by up to 22".

SIZE	6"	7″	8″
А	12"	143/8"	143/8"
В		24"	
ORDER#	6PS24	PS24	PS24

Round Finishing Support w/ **Removable Trim**






Round Finishing Support for use on flat ceiling. 6" diameter only. Fits within 12-3/8" x 12-3/8" frame. Integrated adapter accepts either single-wall or double-wall stovepipe. Removable trim collar allows collar to be fastened in place after finish of ceiling is completed.

SIZE	5"	6"
А	1.	2"
В	5 1/4"	6"
С	2	0"
D	5	1/2"
Е	3)"
F	2)" -
ORDER#	5SFCA	6SFCA

Round Finishing Support

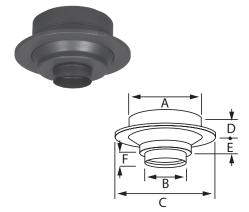

Same as above except collar is fixed; not removable. Integrated adapter accepts either single-wall or double-wall stovepipe.

SIZE	5"	6"	7″	8"
А	12"	12"	14 3/8"	14 3/8"
В	5 1/4"	6"	7"	8"
C	1	7"	2	20"
D		5	1/2"	
Е		3	3"	
F		2	2"	
ORDER#	5SFC-1	6SFC-1	7SFC-1	8SFC-1


Adjustable Tee Support



This part supports the chimney at the base of the installation, functioning similarly to the tee support (SM) but with an adjustable base to provide additional wall clearance as needed. This tee support must be installed with the insulated tee cap (TCS) included with the insulated tee.

SIZE	5"	6"	7″	8″	10"	
А	11 ½"	11 ½"	15 1/2"	15 1/2"	15 1/2"	
В			15"			
С	26 ¾"					
D		0" to 5"				
ORDER#	5SMA-2	6SMA-2	7SMA-2	8SMA-2	10SMA-2	

Wall-Support (UNIVERSAL)

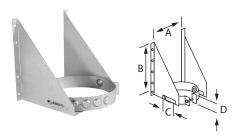

Use to support the chimney on a vertical wall. The triangular plates allow for a 2 3/4" adjustment of the support to the vertical surface. This support can also be used as a wall support above the insulated tee or as a support for an offset elbow. Refer to chart for load bearing capacity. In shorter chimney stack applications, the Wall-Support can also be used in place of a Tee Support. Universal design works with 5", 6", 7", or 8" pipe diameters.

SIZE	5"	6"	7″	8″	10"
А	81/2"	91/2"	101/2"	11½"	13 1/2"
В			12"		
С	2 ¾"				
D	2"				
ORDER#		S	0-2		XSO-2

Roof Support (UNIVERSAL)



The roof support is versatile. A universal collar allows it to fit 5", 6, "7" and 8" chimney. It is typically used to support a chimney at the roof-deck. The mounting brackets easily adjust to suit any pitch. It can also be used as a wall-support when placed upon a floor or mounted to a ceiling; or as offset support. Please refer to instructions for more details.

SIZE	5"	6"	7"	8″	10"
А			8"		
В			4"		
C			2"		
ORDER#		2	ST		XST

Floor Support Plate








Use to support the chimney on a slab, floor, or joist. It includes a tightening collar that locks around the chimney and is secured by self-tapping screws (included). The collar rests on a horizontal plate screwed or nailed to the floor or slab. It can also serve as an intermediate support. Refer to chart for load bearing capacity.


SIZE	5"	6"	7″	8″	10"
A	7"	8"	9"	10"	12"
В	11"	12"	13"	14"	20"
С	16"	16"	16"	18′	18"
ORDER#	5SD	6SD	7SD	8SD	10SD

Anchor Plate

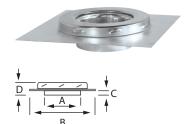

Attach to a masonry or factory-built fireplace to provide proper connection to the chimney. The Anchor Plate can also be used with furnaces or boilers.


SIZE	5"	6″	7"	8″	10"
А	5"	6"	7"	8"	10"
В		1	2"		14"
С			2"		
D			3"		
ORDER#	5SP	6SP	7SP	8SP	10SP

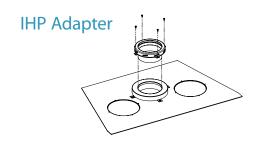

Adapt IHP fireplaces to allow connection to Security's ASHT Chimney.

SIZE	6"	7"
ORDER#	6IHP1	7IHP1



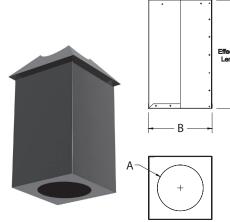


Use when insulated chimney passes up through a ceiling penetration from below. Suited for flat, vaulted, or cathedral applications. Integrated Firestop on bottom. Top can serve as an Attic Radiation Shield where required.

Factory insulation and square-to-round collar are included. Effective height (length) with standard extension is adjustable from 24" up to maximum of 46".

SIZE	6"	7″	8″
А	8 1⁄4"	9 1/4"	10 1/4"
В	12" x 12"	13" x 13"	14" x 14"
ORDER#	6SRSE	7SRSE	8SRSE

Firestop



Use below each combustible floor the chimney passes through.

SIZE	5"	6"	7″	8"	10"
A	14"	16"	16"	16"	18"
В	11"	12"	13"	14"	16"
ORDER#	5BF	6BF	7BF	8BF	10BF

Firestop Radiation Shield






Can be used as alternative to the standard BF firestop. This version includes radiation shield. May be required by some appliance manufacturers.

SIZE	5"	6"	7″	8"	10"
А			16"		
В	10"	11"	12"	13"	15"
С			10"		
ORDER#	5RS	6RS	7RS	8RS	10RS

Adjustable Insulated **Attic Radiation Shield**






Two-piece overlapping design adjusts from 12" up to 22" height to accommodate deeper levels of insulation.

Part is factory-insulated and includes both the base plate and collar as shown.

SIZE	5"	6"	7″	8"	10"
А	11"	12"	13"	14"	16"
В	11"	12"	13"	14"	16"
С	16"				18"
ORDER#	5ARSA	6ARSA	7ARSA	8ARSA	10ARSA

Wall Thimble

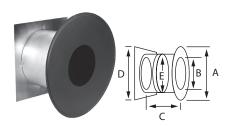


Designed to protect surrounding combustible materials when a chimney passes through a wall. Thimble works with wall thicknesses from 7" up to 12-1/2". Can be trimmed for use with thinner walls. Includes painted Decorative Collar for interior finish. Insulated to prevent heat loss or cold air intrusion.

SIZE	5″	6"	7"	8"	10"
А	17"	17"	20"	20"	20"
В	7 1/4"	8 1⁄4"	9 1/4"	10 1/4"	12 1/4"
С			7 ½" to 12½"		
D	14"		16"		
Е	11"	12"	13"	14"	16"
ORDER#	5RSM-2	6RSM-2	7RSM-2	8RSM-2	10RSM-2

Wall Radiation Shield - 30°






This part is to be used only with a wood-burning fireplace that has been certified for use with the chimney. It has been designed for use when the chimney passes through a wall at an angle.

SIZE	6"	7"	8	10"	
А	34 ¾"	37 1/4"	39 1/4"	42 ¾"	
В	15 ¹/8″	16 ½"	17 1/8"	18 %"	
С	11"	12"	13"	14 ¾"	
D	30 %"	33 1/8"	35 1/8"	38 ¾"	
Е	3"				
ORDER#	6RSMI30	7RSMI30	8RSMI30	10RSMI30	

Wall Radiation Shield - 45°






This part is to be used only with a wood-burning fireplace that has been certified for use with the chimney. It has been designed for use when the chimney passes through a wall at an angle. For use in Canada only.

SIZE	6"	7"	8	10"
А	24 3/8"	26 1/8"	27 ½"	30"
В	15 ¹/8″	16 ½"	17 1/8"	18 %"
С	11"	12"	13"	14 ¾"
D	20 1/4"	22"	23 3/8"	25 %"
Е		3)"	
ORDER#	6RSMI45	7RSMI45	8RSMI45	10RSMI45

Angled Firestop - 30°






For use with factory-built fireplaces certified with ASHT.

SIZE	6"	7″	8"	10"
А	15 3/8"	16 5/8"	17 5/8"	19 ¾"
В	35 ¼"	37 ¾"	39 ¾"	43 5/16"
С	13 ⁵ / ₁₆ "	14 ⁹ / ₁₆ "	15 ⁹ /16"	17 3/8"
ORDER#	6RSM30	7RSM30	8RSM30	10RSM30

Angled Firestop - 45°






For use with factory-built fireplaces listed with ASHT. For use in Canada only.

SIZE	6"	7″	8″	10"
А	15 ⁵ /8"	16 ⁵ /8"	17 5/8"	19 %"
В	24 7/8"	26 5/8"	28"	30 ½"
С	9 15/16"	10 13/16"	11 ½"	12 ¾"
ORDER#	6RSM45	7RSM45	8RSM45	10RSM45

Roof Brace

(UNIVERSAL)



Required to stabilize chimney against wind-loading when 5 feet or more extends above the roof-line. Adjustable collar works with 5", 6", 7", or 8" pipe. Brace arms are adjustable from 60" up to 115".

Note: Not intended to provide protection against sliding ice or snow on a metal roof.

SIZE	5"	6"	7"	8″	10"
А	7"	8"	9"	10"	12"
В	60"				
ORDER#	BS2			XBS2	


Use to provide lateral stability when chimney runs up an interior or exterior wall. Adjustable arms slide in or out to set required clearances. Adjustable collar works with 5", 6", 7", or 8"


Note: The use of wall bands at intervals of 8' is recommended.

Universal Wall Strap









Guy Wire Band






Can be used to provide added stability to a chimney that protrudes from 5' up to 13' above a roof. Collar includes three eyelets for attaching wire rope (rope not included). Note: Not intended to provide protection from sliding ice & snow.

SIZE	6"	7"	8"	10"	
А	2"				
ORDER#	6BH	7BH	8BH	10BH	

Flat Roof Flashing






Galvanized Flat Roof Flashing. Storm collar included.

SIZE	5"	6"	7"	8"	10"
A			7½"		
В	20"		24	4"	
ORDER # (CANADA)	5F	6F	7F	8F	10F
ORDER # (USA)	5FR	6FR	7FR	8FR	10FR

Adjustable Roof Flashing






Adjustable Roof Flashing. Choose from three different versions to match roof pitch. Storm collar is included.

	SIZE	5"	6"	7"	8"	10"
	А			6"		
1/12 - 7/12	В			24"		
1/12 - //12	ORDER # (CANADA)	5FA	6FA	7FA	8FA	10FA
	ORDER # (USA)	5FAR	6FAR	7FAR	8FAR	10FAR
	A	6"		43/8"	37/8"	37/8"
8/12 - 12/12	В	24"			30"	
0/12-12/12	ORDER # (CANADA)	5FB	6FB	7FB	8FB	10FB
	ORDER # (USA)	5FBR	6FBR	7FBR	8FBR	10FBR
	A			6	1/4"	
12/12 - 21/12	В			36"		42"
	ORDER # (CANADA)		6FBB	7FBB	8FBB	10FBB
	ORDER # (USA)		6FBBR	7FBBR	8BBR	10FBBR

DSA Roof Flashing






This flashing features a base plate made of malleable (aka "Dead-Soft") aluminum. This material is easily shaped-by-hand to match corrugated metal roofing or rounded clay-tile shingles. Storm Collar is included.

SIZE		6"	7″	8"
	A		6"	
1/12 - 7/12 Aluminum	В	36"		
Malleable	ORDER # (CANADA)	6FAA	7FAA	8FAA
acaa.rc	ORDER # (USA)	6FAAR	7FAAR	8FAAR
	A	6"	6 3/8"	6 7/8"
8/12 - 12/12	В	36"		
Aluminum Malleable	ORDER # (CANADA)	6FBA	7FBA	8FBA
	ORDER # (USA)	6FBAR	7FBAR	8FBAR

Peak Roof Flashing

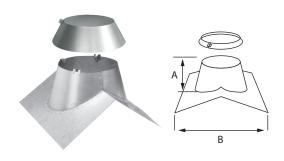

Galvanized Peak Roof Flashing. Choose from two different versions to match roof pitch. Storm collar included.

	SIZE	6"	7″	8″	10"		
	A		35	5/8"			
1/12 7/12	В	12"	13"	13 ½"	15"		
1/12 - 7/12	ORDER # (CANADA)	6FP	7FP	8FP	10FP		
	ORDER # (USA)	6FPR	7FPR	8FPR	10FPR		
	A	5"	4"	3 1/4"	1½"		
0/12 12/12	B		14"				
8/12 - 12/12	ORDER # (CANADA)	6FPB	7FPB	8FPB	10FPB		
	ORDER # (USA)	6FPBR	7FPBR	8FPBR	10FPBR		

Storm Collar



Collar fits over flashings to help prevent water intrusion. Generous shoulder width ensures effective protection in all climates when installed as directed. Included with all roof flashing.

SIZE	5"	6"	7″	8″	10"
A			5"		
ORDER#	5FC	6FC	7FC	8FC	10FC

Snow Splitter (UNIVERSAL)



Ships flat, and folds easily on the job site. Includes 8 fastening flanges (4 on each side) for mounting. Made with heavy 14 gauge galvanized steel.

SIZE	5"	6"	7″	8″	
ORDER#	FSD				

Vertical Cap



A vertical cap is required to prevent precipitation from entering the chimney. Unique clamp design allows for universal fit on any chimney with either a one-inch (ASHT) or two-inch (S2100) wall thickness.

Note: Check local codes to determine if an optional spark arrester is required.

SIZE	5"	6"	7″	8″	10"
А	43/4"	43/4"	43/4"	43/4"	43/4"
В	12 1/4"	12 1/4"	12 1/4"	15 ½"	15 ½"
ORDER#	5CC	6CC	7CC	800	10CC

Universal Spark Arrester Band






This band is wrapped around the vertical cap. Its purpose is to help prevent burning embers from escaping. As an added benefit, it keeps birds and other small animals from entering the chimney. Mesh must be cut to suit cap. Made of Stainless Steel.

SIZE	5"	6"	7″	8″
ORDER#	PE			

Trim Collar




The optional decorative Trim Collar can be used to help provide a professional finish around the chimney when passing through a non-combustible wall.

SIZE	6"	7"	8″
Ø INTERIOR	8%"	9%"	10 %"
Ø EXTERIOR	17"	20"	20"
ORDER#	6PF	7PF	8PF

Decorative Collar Single-Wall Stovepipe





Used in through-wall installations. Provides decorative finish with transition between chimney and single-wall stove pipe.

SIZE	5"	6"	7″	8″		
А	7"	8"	9"	10"		
В	5 1/8"	6 1/8"	7 1/8"	8 1/8"		
С	1"					
ORDER#	5PB	6PB	7PB	8PB		

Decorative Collar DL Double-Wall Stovepipe




Used in through-wall installations. Provides decorative finish in transition between chimney and DL Double-Wall stove pipe.

SIZE Ø	6"	7"	8"	
А	8 1/8"	9 3/8"	10 3/8"	
В	6 5/8"	7 5%"	8 %"	
С	1 3/8"	7/8"	7/8"	
ORDER#	6DQDH	7DQDH	8DQDH	

Finishing Cone






Use this optional part if desired to conceal 5" projection of horizontal chimney section within dwelling. Must be used in combination with flue extension.

SIZE	6"
А	12"
В	6 ¼"
С	5 ½"
ORDER#	6PB

Offset Chart

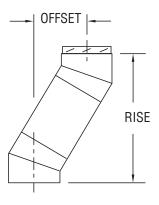

Use to determine the lengths required for an installation. Determine the offset required in view of the obstacles that must be avoided. Refer to the offset/rise chart to determine the elbows required as well as the insulated lengths needed. Check the corresponding offset height dimensions.

ELBOW OFFS	ET & RISE C	HART						
			One le	ngth betwe	een elbows			
Angle SIZE	SIZE.		8"	12"	18"	24"	36"	48"
		Offset	3 5/16"	4 5/16"	5 %"	7 1/16"	10 ½"	13 %"
		Rise	15 ¹¹ / ₁₆ "	19 ⁹ /16"	36 ³/8"	31 ³ / ₁₆ "	42 3/4"	54 ³ / ₈ "
15°	6", 7", 8"	Two lengths between elbows						
13	0,7,0		8" & 48"	12" & 48"	18" & 48"	24 "& 48"	36" & 48"	48" & 48"
		Offset	15 3/8"	16 ⁷ /16"	18"	19 ½"	25 5/8"	25 ¾"
		Rise	60 15/16"	64 ¹³ /16"	70 ⁹ /16"	76 ³/8"	87"	99 %/16"
			One le	ngth betwe	een elbows			
Angle	Dia.		8"	12"	18"	24"	36"	48"
		Offset	7 7/16"	9 7/16"	12 7/16"	15 ⁷ / ₁₆ "	21 7/16"	27 7/16"
		Rise	20"	23 ½"	28 ¹¹ / ₁₆ "	33 7/8"	44 ¼"	54 ¹¹ / ₁₆ "
30°	6",7",8"	Two lengths between elbows						
50			8" & 48"	12" & 48"	18" & 48"	24 "& 48"	36" & 48"	48" & 48"
		Offset	30 13/16"	32 13/16"	35 ¹³ / ₁₆ "	38 13/16"	44 13/16"	50 ¹³ / ₁₆ "
		Rise	60 9/16"	64"	69 ¼"	74 ⁷ / ₁₆ "	84 13/16"	95 ¼"
				ngth betwe	een elbows			
Angle	Dia.		8"	12"	18"	24"	36"	48"
		Offset	10 5/16"	13 3/16"	17 3/8"	21 5/8"	30 1/8"	38 5/8"
		Rise	17 ¹³ /16"	20 5/8"	24 7/8"	29 1/8"	37 5/8"	46 1/8"
45°				Tw	o lengths betw	een elbows		
(CANADA	6", 7", 8"		8" & 48"	12" & 48"	18" & 48"	24 "& 48"	36" & 48"	48" & 48"
ONLY)		Offset	43 7/16"	46 ¼"	50 ½"	54 ¾"	63 ¼"	71 11/16"
		Rise	50 15/16"	53 ¾"	58"	62 1/4"	70 ¾"	79 3/16"

Limited Lifetime Warranty

This Security Chimneys International, Ltd. (SCIL) Limited Lifetime Warranty warrants your residential vent and/or chimney system to be free from defects in material and workmanship at the time of manufacture. This Limited Lifetime Warranty includes all components and fittings, except termination caps and Secure Black SW single wall black stove pipe. After installation, if covered components manufactured by SCIL are found to be defective in materials or workmanship during the Limited Lifetime Warranty period and while the Product remains at the site of the original installation, SCIL will, at its option, replace the covered components. SCIL reserves the right to replace covered components with an equivalent product and the replacement must be carried out in accordance with SCILs recommendations. If replacement is not commercially practical, SCIL will, at its option, refund the purchase price or wholesale price of the SCIL product, whichever is applicable. THERE ARE EXCLUSIONS AND LIMI-TATIONS to this Limited Lifetime Warranty as described herein.

COVERAGE COMMENCEMENT DATE

Warranty coverage begins on the date of installation. In the case of new home construction, warranty coverage begins on the date of first occupancy of the dwelling or six months after the sale of the Product by an independent SCIL dealer/distributor, whichever occurs earlier. The warranty shall commence no later than 24 months following the date of product shipment from SCIL, regardless of the installation or occupancy date.

EXCLUSIONS AND LIMITATIONS

This Limited Lifetime Warranty applies only if the Product is installed in the United States or Canada and only if used for the application for which it was designed and intended. The Product must be maintained in accordance with the printed instructions accompanying the Product and in compliance with all applicable installation and building codes and good trade practices.

This warranty is transferable. The Product must be purchased through a listed supplier of SCIL and proof of purchase must be provided. SCIL will be responsible for the replacement of the residential vent and/or chimney system considered to be defective for the following periods:

Termination Caps - Replacement at no charge for 5 years from the date of installation, excluding labor

Components and fittings (excludes termination caps) -

Year 1-15 – Replacement of all components and fittings (a labor allowance may apply to a maximum of 300 \$ * certain conditions apply). Year 16 - Replacement at 50% off of the prevailing list price in effect at the time of replacement (No labor allowance applies). *Labor Allowance Conditions: Any Warranty replacement work must be performed by a Professional Installer.

SCIL will not be responsible for: (a) damages caused by normal wear and tear, corrosion from salt air, accident, riot, fire, flood or acts of God; (b) damages caused by abuse, negligence, misuse, or unauthorized alteration or repair of the Product affecting its stability or performance. (The Product must be subject to normal use with approved fuels listed in the Operation Manual provided with the product. Where applicable, fuel products with abnormal burning characteristics, including but not limited to fuel such as driftwood, plywood and wood products using a binder may burn at excessive temperatures and may cause damage to the Product or may cause it to function improperly; (c) damages caused by failing to provide proper maintenance and service in accordance with the instructions provided with the Product; (d) damages, repairs or inefficiency resulting from faulty installation or application of the Product.

This Limited Lifetime Warranty covers only parts as provided herein. SCILs entire liability is limited to the purchase price of this product. In no case shall SCIL be responsible for materials, components or construction which are not manufactured or supplied by SCIL or for the labor necessary to install, repair or remove such materials, components or construction. Additional utility bills incurred due to any malfunction or defect in equipment are not covered by this Limited Lifetime Warranty. All replacement or repair components will be shipped F.O.B. from the nearest stocking SCIL factory.

LIMITATION ON LIABILITY

It is expressly agreed and understood that SCIL's sole obligation and the purchaser's exclusive remedy under this warranty, under any other warranty, expressed or implied, or in contract, tort or otherwise, shall be limited to replacement, repair, or refund, as specified herein. In no event shall SCIL be liable for any incidental or consequential damages caused by defects in the Product, whether such damage occurs or is discovered before or after replacement or repair, and whether such damage is caused by SCIL's negligence. SCIL has not made and does not make any representation or warranty of fitness for a particular use or purpose, and there is no implied condition of fitness for a particular use or purpose.

SCIL makes no expressed warranties except as stated in this Limited Lifetime Warranty. The duration of any implied warranty is limited to the duration of this expressed warranty.

No one is authorized to change this Limited Lifetime Warranty or to create for SCIL any other obligation or liability in connection with the Product. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The provisions of this Limited Lifetime Warranty are in addition to and not a modification of or subtraction from any statutory warranties and other rights and remedies provided by law.

INVESTIGATION OF CLAIMS AGAINST WARRANTY

SCIL reserves the right to investigate any and all claims against this Limited Lifetime Warranty and to decide, in its sole discretion, upon the method of settlement.

To receive the benefits and advantages described in this Limited Lifetime Warranty, the appliance must be installed and repaired by a licensed contractor approved by SCIL. Contact SCIL at the address provided herein to obtain a listing of approved dealers/distributors. SCIL shall in no event be responsible for any warranty work done by a contractor that is not approved without first obtaining SCIL's prior written consent.

HOW TO REGISTER A CLAIM AGAINST WARRANTY

In order for any claim under this warranty to be valid, you must contact the SCIL dealer/distributor from which you purchased the product. If you cannot locate the dealer/distributor, then you must notify SCIL in writing. SCIL must be notified of the claimed defect in writing within 90 days of the date of failure. Notices should be directed to the SCIL Warranty Department at 2125 Monterey, Laval, Quebec, Canada H7L 3T6.

www.securitychimneys.com

Security Chimneys

2125 Monterey, Laval, Quebec Canada, H7L 3T6

450-973-9999 800-361-4909 (US) 800-667-3387 (Canada) 450-973-2222 (Fax)

Need product information or technical support? Our customer service specialists are ready to answer your questions:

800-667-3387 or contact info@securitychimneys.com







